

# TEAM8

AUDIBLE GPS + PERSONAL SPEAKER  
MANUAL / USER GUIDE

SERIAL # HERE

## WARRANTY / CONTACT

### **THE FOLLOWING ARE INCLUDED:**

- 30 DAY MONEY-BACK GUARANTEE
- 1-YEAR LIMITED WARRANTY  
(ONLINE REGISTRATION REQUIRED)
- ENROLLED AS A TECTECTEC! MEMBER
- RECEIVE EXCLUSIVE DISCOUNTS
- PRE-RELEASE INSIDER ACCESS TO NEW PRODUCTS

### **CONTACT:**

US@TECTECTEC.COM

(833)-383-2669

ALL SOCIAL....@TECTECTECUSA



THE **TEAM8**<sup>TM</sup> IS A PERSONAL, AUDIBLE, GPS DEVICE + SPEAKER. WE CREATED THIS PRODUCT WITH ONLY **YOU** IN MIND.

GOLF IS A SPORT OF ETIQUETTE AND FUN. HERE AT TECTECTEC!, OUR MAIN FOCUS IN THIS PRODUCT IS TO OFFER THE FIRST AND ONLY AUDIBLE GPS / SPEAKER DESIGNED FOR YOUR SINGULAR NEEDS ON THE COURSE. YES, THE **TEAM8** IS LOUD ENOUGH FOR OTHERS IN YOUR FOURSOME TO GET INTO THE GROOVE, BUT THIS LIGHT WEIGHT AND VERSATILE DEVICE KEEPS YOU IN CONTROL AND IN THE RIGHT MINDSET FOR OPTIMAL ON-COURSE JOY AND PERFORMANCE.

**TecTecTec!**  
ONLY WHAT YOU NEED

## PRODUCT DETAILS

POWER

VOLUME +



DISTANCE

VOLUME -

STRAP TETHER

CHARGE


USB-C

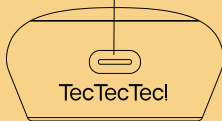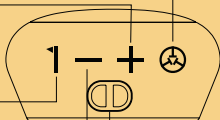

## PRODUCT DETAILS



MAGNET

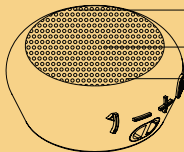

RED LIGHT

SPEAKER GUARD

BLUE LIGHT

**FLASHING BLUE LIGHT:** SPEAKER IS LOOKING FOR DEVICE TO BE PAIRED WITH.

**SOLID BLUE LIGHT:** SPEAKER IS CONNECTED TO ONE OF YOUR DEVICES.

**RED LIGHT:** SPEAKER IS CHARGING.

## STEP 01 / APP

**DOWNLOAD**

ONLY NEED TO DO THIS ONCE

DOWNLOAD OUR **TECTECTEC! GOLF GPS APP**



USE THE CORRECT QR CODE ABOVE BASED ON THE COMPATIBILITY OF YOUR MOBILE DEVICE. ONCE DOWNLOADED, YOU WILL BE ABLE TO PAIR THE **TEAM8** WITH YOUR PHONE. NOW YOU'RE READY TO ENJOY.

## STEP 01 / APP

 
### SIGN UP

OPEN THE TECTECTEC! GOLF GPS APP AND CLICK ON THE BUTTON TO "SIGN UP".

FOLLOW THE INSTRUCTIONS PROVIDED ON THE SCREEN, SELECT "TEAM8" AND THEN CLICK ON THE BUTTON TO "SUBMIT".

THE "**DEVICE SERIAL NUMBER**" IS LOCATED ON THE FRONT OF THIS MANUAL.

## STEP 02 / DEVICE



### **TURN POWER ON**

PRESS AND HOLD THE TECTECTEC BUTTON UNTIL YOU HEAR THE AUDIBLE CHIME AND THE BLUE LIGHT IS ILLUMINATED.

POWER OFF: PRESS AND HOLD THE POWER BUTTON FOR 5 SECONDS. IF YOUR SPEAKER IS NOT CONNECTED TO ANY DEVICE FOR 10 MINUTES, IT WILL AUTOMATICALLY SHUT DOWN.



## STEP 06 / APP

### **BLUETOOTH PAIRING**

GO TO THE BLUETOOTH SETTINGS OF YOUR PHONE TO PAIR THE DEVICE. SELECT “TEAM8” TO PAIR.

## STEP 04 / APP

### QUICK PLAY

PRESS QUICK PLAY TO START.



TecTecTec!

### TEAM8

#12:34:56:78:D1:2D



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

## STEP 05 / APP

### PAIRING

FOLLOW PROMPT / PRESS NEXT

### PAIR YOUR DEVICE

---

1. ON YOUR SMARTPHONE, MAKE SURE YOU HAVE BLUETOOTH TURNED ON.
2. POWER ON YOUR SPEAKER.
3. SELECT **NEXT** BUTTON BELOW.

CANCEL

NEXT

## STEP 06 / APP

### AUTHORIZATION

**ALLOW** ACCESS TO FIND DEVICE.



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

ALLOW **TTECTECTEMOBILE** TO FIND, CONNECT  
TO AND DETERMINE THE RELATIVE POSITION  
OF NEARBY DEVICES?.

**ALLOW**

**DON'T ALLOW**

## STEP 06 / APP

### **AUTHORIZATION**

**ALLOW** ACCESS TO FIND DEVICE.

### **\*\*\* IMPORTANT \*\*\***

PLEASE FOLLOW THE PROMPTS AND CLICK  
THE CORRESPONDING OPTIONS HIGHLIGHTED.

ALLOW **TECTECTECMOBILE** TO ACCESS  
THIS DEVICE'S LOCATION?.

↖ **PRECISE**

**WHILE USING THE APP**

### **ATTENTION**

THIS APP COLLECTS LOCATION DATA TO  
ENABLE DISTANCE READOUTS IN PLAY GOLF,  
EVEN WHEN THE APP IS CLOSED OR  
NOT IN USE.

**ALLOW ALL THE TIME**

## STEP 07 / APP

### SELECT GOLF COURSE

CHOOSE COURSE FROM NEARBY, RECENT OR SEARCH

#### ← SELECT GOLF COURSE ≡

SEARCH GOLF COURSES



NEARBY

RECENT

<b>AWESOME GOLF COURSE 1</b> SEATTLE, WA	1.8 MI
<b>AWESOME GOLF COURSE 2</b> SEATTLE, WA	3.5 MI
<b>AWESOME GOLF COURSE 3</b> SEATTLE, WA	7.1 MI
<b>AWESOME GOLF COURSE 4</b> SEATTLE, WA	8.4 MI
<b>AWESOME GOLF COURSE 5</b> SEATTLE, WA	10.5 MI
<b>AWESOME GOLF COURSE 6</b> SEATTLE, WA	13.2 MI
<b>AWESOME GOLF COURSE 7</b> SEATTLE, WA	15.7 MI
<b>AWESOME GOLF COURSE 8</b> SEATTLE, WA	15.9 MI
<b>AWESOME GOLF COURSE 9</b> SEATTLE, WA	18.0 MI

## STEP 08 / APP

### SELECT TEE BOX

CHOOSE TEE BOX FROM LIST BELOW



### SELECT TEE BOX

- |                                  |              |         |
|----------------------------------|--------------|---------|
| <input type="radio"/>            | <b>BLACK</b> | 419 YDS |
| <input checked="" type="radio"/> | <b>BLUE</b>  | 395 YDS |
| <input type="radio"/>            | <b>WHITE</b> | 375 YDS |
| <input type="radio"/>            | <b>RED</b>   | 305 YDS |

# IN PLAY / APP

## HOLE OVERVIEW

CLICK < HOLE > TO MOVE HOLES MANUALLY

## HOLE OVERVIEW

< HOLE 1 >

PAR 4 | LENGTH 413 | RANK 5

LAST SHOT DISTANCE --- YDS



DISTANCE TO HOLE

**396**

FRONT

**410**

MIDDLE

**424**

BACK

HAZARDS

← **397**

BUNKER

**283** →

BUNKER

**294** →

BUNKER

END GAME

 
SETTINGS



## DISTANCE

### \*\*\* IMPORTANT \*\*\*

GPS DISTANCE IS MEASURED FROM THE LOCATION OF THE PHONE, NOT FROM THE DEVICE.



**DISTANCE**

THE FLAG STICK CONTROLS THE FOLLOWING:


 
- **SINGLE PRESS** - MEASURES DISTANCE TO FRONT / MIDDLE / BACK OF GREEN.
- **HOLD SINGLE PRESS** - MEASURES DISTANCE FROM SHOT TO SHOT.
- **DOUBLE PRESS** - MEASURES DISTANCE TO CLOSEST HAZARD.

## CONNECTION RANGE

### DISTANCE FROM DEVICE TO PHONE

**TEAM8** MUST BE WITHIN 15 YDS TO HAVE CONSISTENT PAIRING WITH APP.

15 YDS

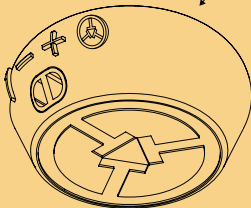

# MAGNETIC ECOSYSTEM

THE TEAM8 IS A PART OF THE TECTECTEC!

MAGNETIC  
ECOSYSTEM



MAGNETIC SOLE  
ON **TEAM8**.



GOLF CART



GOLF CLUB



 
BAG CLIP



BELT CLIP

## MUSIC

**PLAY /** \_\_\_\_\_  
**PAUSE MUSIC**



**VOLUME /** \_\_\_\_\_  
**SONG SELECTION**


THE - / + BUTTONS CONTROLS BOTH SPEAKER  
VOLUME AND SONG SELECTION:

- **SINGLE PRESS** - CONTROLS VOLUME
- **HOLD VOLUME BUTTON** - CONTROLS SONG  
SELECTION

## PHONE

 **ANSWER /  
END CALL**

**VOLUME /  
ON CALL**




THE TECTECTEC BUTTON WILL ANSWER YOUR PHONE CALL. THE SPEAKER HAS A BUILT IN MICROPHONE SO YOU CAN CONTINUE YOUR HANDS-FREE ON-COURSE JOY.

- **SINGLE PRESS** - ANSWERS / ENDS CALL
- THE - / + SIGN CONTROL CALL VOLUME

RINGTONE FROM PHONE CALLS ARE DEACTIVATED AS WE DO NOT WANT YOU TO BE DISTURBED WHEN PLAYING. CALLS FROM SOCIAL MEDIA APPS (WHATSAPP, MESSENGER, SNAPCHAT, ETC.) MIGHT STILL RING. PLEASE VISIT OUR WEBSITE TUTORIALS TO LEARN HOW TO SETUP DO NOT DISTURB MODE.

## CHARGING

**CHARGE  
USB-C**

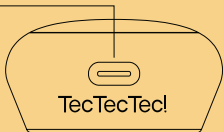

THE **TEAM8** COMES WITH A USB TO USB-C CABLE. PLUG CABLE INTO PORT ABOVE THE TECTECTEC! LOGO.

A SINGLE CHARGE LASTS 1-2 ROUNDS DEPENDING ON THE USAGE. PLEASE MAKE SURE YOUR PHONE IS FULLY CHARGED BEFORE PAIRING TEAM8.

GPS USES SUBSTANTIAL POWER.

## FAQ

THE **TEAM8** IS A GPS DEVICE THAT REQUIRES A CONSTANT WIFI OR CELLULAR CONNECTION TO RETRIEVE INFORMATION FROM THE SERVER.

**- THE SOUND COMES OUT FROM MY PHONE, NOT FROM THE SPEAKER, WHAT SHOULD I DO?**  
GO TO YOUR BLUETOOTH SETTINGS, THEN PAIR TEAM8. PLEASE NOTE THAT YOU MIGHT SEE TWO TEAM8 ON YOUR BLUETOOTH SETTINGS.

**- DO I HAVE TO PAIR MY DEVICE MANUALLY EVERY TIME I OPEN THE APP?** NO, THE APP WILL RECOGNIZE THE DEVICE AND AUTO PAIR.

**-LOW BATTERY:** WHEN THE BATTERY IS LOW, THE SPEAKER WILL PLAY A CHIME SOUND.

## SAFETY

### **FOR YOUR SAFETY AND FOR LONG ENJOYMENT OF OUR PRODUCT, PLEASE FOLLOW THE SAFETY INSTRUCTIONS:**

- PLEASE USE AS DESCRIBED IN THE MANUAL.
- TO PROTECT YOUR HEARING AND WIDEN THE LIFE SPAN OF THE SPEAKER, MAXIMUM VOLUME SHOULD NOT BE HELD DIRECTLY TO THE EAR.
- PLEASE KEEP THE POWER ADAPTER AND SPEAKER DRY AND USE THEM IN A DRY ENVIRONMENT ONLY.
- DO NOT TOUCH WITH WET HANDS.
- KEEP AWAY FROM DAMP, HIGH TEMPERATURE, DUSTY, EROSION AND OXIDATIVE ENVIRONMENTS.
- DO NOT DROP THE UNIT
- TURN OFF POWER WHEN DEVICE IS NOT IN USE.
- DO NOT OPEN OR DISASSEMBLE THE UNIT.



## FCC WARNING STATEMENT


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

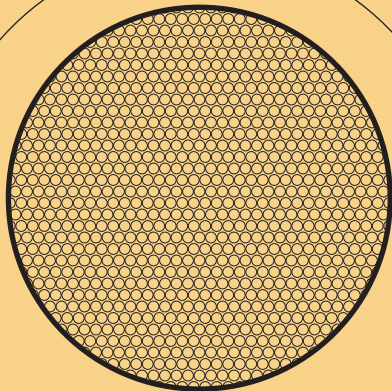

# TEAM8

GPS AUDIO + HAUT-PARLEUR INDIVIDUEL  
MANUEL D'UTILISATION

## GARANTIE / CONTACT

### **LES ÉLÉMENTS SUIVANTS SONT INCLUS :**

- 30 JOURS SATISFAIT OU REMBOURSE
- 2-ANS DE GARANTIE (ENREGISTREMENT EN LIGNE)
- ACCÈS A LA COMMUNAUTÉ TECTECTEC !
- ACCÈS AUX PROMOS EXCLUSIVES
- ACCÈS AUX PRODUITS EN AVANT-PREMIÈRE

### **CONTACT:**

CS@TECTECTEC.COM

RÉSEAUX SOCIAUX....@TECTECTECUSA



LE **TEAM8**<sup>TM</sup> (TEAMMATE = COÉQUIPIER)  
EST UNE ENCEINTE BLUETOOTH PERSON-  
NELLE PERMETTANT D'ENTENDRE LES  
DISTANCES ET VOTRE MUSIQUE SANS  
DÉRANGER LES AUTRES JOUEURS.

LE GOLF EST UN SPORT DE RESPECT ET DE  
PLAISIR. ICI CHEZ TECTECTEC!, NOTRE OBJEC-  
TIF PRINCIPAL DANS CE PRODUIT EST  
D'OFFRIR LE PREMIER ET SEUL GPS AUDIBLE /  
HAUT-PARLEUR CONÇU POUR VOS BESOINS  
PERSONNELS SUR LE PARCOURS.

OUI, LE TEAM8 EST ASSEZ FORT POUR QUE  
VOS COÉQUIPIERS PUISSENT AUSSI EN  
PROFITER. SON POIDS LÉGER ET SA POLYVA-  
LENCE VOUS PERMET DE GARDER LE  
CONTRÔLE.

**TecTecTec!**  
ONLY WHAT YOU NEED

## DÉTAILS DU PRODUIT

POWER

VOLUME +

DISTANCE

 

VOLUME -

ENCOCHE

DRAGONNE

PRISE


CHARGEUR USB-C

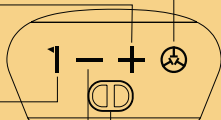

## DÉTAILS DU PRODUIT



AIMANT

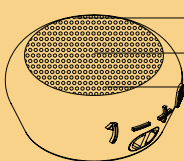

LED ROUGE

GRILLE HAUT-PARLEUR

LED BLEUE

LED BLEUE CLIGNOTANTE : L'ENCEINTE RECHERCHE UN APPAREIL À QUI SE CONNECTER.

LED BLEUE CONTINUE : L'ENCEINTE EST CONNECTÉE À L'UN DE VOS APPAREILS.

LED ROUGE : L'ENCEINTE SE RECHARGE.

## ÉTAPE 01 / APP

**TÉLÉCHARGEMENT**  
À RÉALISER QU'UNE FOIS.

TÉLÉCHARGER NOTRE APPLICATION  
TECTECTEC ! GOLF GPS



UTILISEZ L'UN DES CODES QR CI-DESSUS EN FONCTION DU MODÈLE DE VOTRE TÉLÉPHONE. UNE FOIS TÉLÉCHARGÉ, VOUS ALLEZ POUVOIR APPAIRER VOTRE TEAM8 DEPUIS NOTRE APPLICATION.

## ÉTAPE 01 / APP

### S'INSCRIRE

OUVREZ L'APPLICATION GPS TECTECTEC !  
GOLF ET CLIQUEZ SUR "S'INSCRIRE".


SUIVEZ LES INSTRUCTIONS À L'ÉCRAN ET  
CLIQUEZ SUR "VALIDER".

LE "**NUMÉRO DE SÉRIE DE L'APPAREIL**" SE  
TROUVE SUR LA **COUVERTURE** DE CE MANUEL.



## ÉTAPE 02 / ÉQUIPEMENT

### ALLUMER

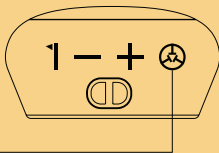

### ALLUMER

MAINTENEZ LE BOUTON ENFONCÉ JUSQU'À CE QUE L'ENCEINTE S'ALLUME.

POUR ÉTEINDRE MAINTENEZ LE BOUTON POWER PENDANT CINQ SECONDES. LE HAUTPARLEUR S'ÉTEINDRA AUTOMATIQUÉMENT APRÈS 10 MINUTES S'IL N'EST PAS CONNECTÉ EN BLUETOOTH.

## ÉTAPE 03 / iOS

### BLUETOOTH AUDIO

ALLEZ DANS LES PARAMÈTRES BLUETOOTH DE VOTRE TÉLÉPHONE, PUIS SÉLECTIONNEZ « TEAM8 ».

# ÉTAPE 04 / APP

**QUICK PLAY**

PRESSEZ QUICK PLAY POUR COMMENCER.



**TecTecTec!**

**TEAM8**

#12:34:56:78:D1:2D



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

## ÉTAPE 05 / APP

### APPAIRAGE

APPUYEZ SUR SUIVANT (NEXT)

### PAIR YOUR DEVICE

---

1. ON YOUR SMARTPHONE, MAKE SURE YOU HAVE BLUETOOTH TURNED ON.
2. POWER ON YOUR SPEAKER.
3. SELECT **NEXT** BUTTON BELOW.

CANCEL

NEXT

## ÉTAPE 06 / APP

### AUTHORISATIONS

DONNEZ TOUTES LES **AUTHORISATIONS NÉCESSAIRES**  
À L'APPLICATION POUR SON BON FONCTIONNEMENT..



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

AUTORISER TECTECTECMOBILE À  
DÉTECTER LES APPAREILS À PROXIMITÉ,  
S'Y CONNECTER ET DÉTERMINER LEUR  
POSITION RELATIVE ?

**AUTORISER**

## ÉTAPE 06 / APP

### AUTHORISATION

ALLOW ACCESS TO FIND DEVICE.

### \*\*\* IMPORTANT \*\*\*

DONNEZ TOUTES LES AUTORISATIONS NÉCESSAIRES À L'APPLICATION POUR SON BON FONCTIONNEMENT.

AUTORISEZ TECTECTECMOBILE À ACCÉDER À LA POSITION DE CET APPAREIL ?

**EXACTE**

**LORSQUE VOUS UTILISEZ  
L'APPLICATION**

### ATTENTION

CETTE APPLICATION COLLECTE LA GÉOLOCALISATION DE VOTRE TÉLÉPHONE POUR DÉTERMINER LES DISTANCES SUR LE PARCOURS DE GOLF MÊME LORSQUE VOTRE TÉLÉPHONE À L'ÉCRAN ÉTEINT.

**AUTORISATION D'ACCÈS À « POSITION ».  
TOUJOURS AUTORISER**

## ÉTAPE 07 / APP

### SÉLECTIONNER UN PARCOURS DE GOLF

A PROXIMITÉ / RÉCENT / RECHERCHER

← SELECT GOLF COURSE ≡

SEARCH GOLF COURSES



NEARBY

RECENT

<b>AWESOME GOLF COURSE 1</b> SEATTLE, WA	1.8 MI
<b>AWESOME GOLF COURSE 2</b> SEATTLE, WA	3.5 MI
<b>AWESOME GOLF COURSE 3</b> SEATTLE, WA	7.1 MI
<b>AWESOME GOLF COURSE 4</b> SEATTLE, WA	8.4 MI
<b>AWESOME GOLF COURSE 5</b> SEATTLE, WA	10.5 MI
<b>AWESOME GOLF COURSE 6</b> SEATTLE, WA	13.2 MI
<b>AWESOME GOLF COURSE 7</b> SEATTLE, WA	15.7 MI
<b>AWESOME GOLF COURSE 8</b> SEATTLE, WA	15.9 MI
<b>AWESOME GOLF COURSE 9</b> SEATTLE, WA	18.0 MI

## ÉTAPE 08 / APP

### SÉLECTIONNER LE TEE BOX

CHOISISSEZ DEPUIS LA LISTE CI-DESSOUS



### SELECT TEE BOX

- |                                  |              |         |
|----------------------------------|--------------|---------|
| <input type="radio"/>            | <b>BLACK</b> | 419 YDS |
| <input checked="" type="radio"/> | <b>BLUE</b>  | 395 YDS |
| <input type="radio"/>            | <b>WHITE</b> | 375 YDS |
| <input type="radio"/>            | <b>RED</b>   | 305 YDS |



# IN PLAY / APP

## APERÇU DU TROU

PRESSEZ < HOLE > POUR CHANGER MANUELLEMENT DE TROU

### HOLE OVERVIEW

< HOLE 1 >

PAR 4 | LENGTH 413 | RANK 5

LAST SHOT DISTANCE --- YDS



DISTANCE TO HOLE

**396**

FRONT

**410**

MIDDLE

**424**

BACK

HAZARDS

← **397**

BUNKER

**283** →

BUNKER

**294** →

BUNKER

 
END GAME

SETTINGS

## DISTANCE

### \*\*\* IMPORTANT \*\*\*

LA DISTANCE GPS EST MESURÉE DEPUIS LA POSITION DU TÉLÉPHONE ET NON DE L'ÉQUIPEMENT.



**DISTANCE**

LE BOUTON DRAPEAU VOUS PERMET :


 
- **UN APPUI SIMPLE** – MESURE LA DISTANCE AU-DEVANT/CENTRE/DERRIÈRE DU GREEN.
- **UN APPUI PROLONGÉ** – MESURE LA DISTANCE D'UN TIR
- **DEUX APPUIS SUCCESSIFS** – MESURE LA DISTANCE AUX DANGERS

# PORTÉE DE LA CONNEXION

## DISTANCE DE L'ÉQUIPEMENT AU TÉLÉPHONE

TEAM8 DOIT ÊTRE DANS UN RAYON DE 10 MÈTRES POUR MAINTENIR LA CONNEXION AVEC L'APPLICATION. VOUS DEVEZ RESTEZ DANS CE RAYON POUR PROFITER DES DISTANCES ET DE LA MUSIQUE.

10 MÈTRES

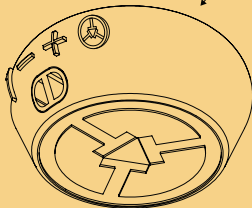

# ÉCOSYSTÈME MAGNÉTIQUE

LE TEAM8 FAIT PARTIE DU

MAGNETIC  
ECOSYSTEM 

SOCLE MAGNÉTIQUE  
SUR LE **TEAM8**.



VOITURETTE



CLUB DE GOLF



 
CLIP POUR SAC



CLIP CEINTURE

## MUSIQUE

JOUER /  
METTRE EN PAUSE



VOLUME /  
SÉLECTION DE LA MUSIQUE


LES BOUTONS -/+ PERMETTENT DE RÉGLER LE VOLUME DE L'ENCEINTE ET CHANGER DE PISTE :

- **UN APPUI SIMPLE** – CONTRÔLE DU VOLUME
- **UN APPUI PROLONGÉ** – CHANGEMENT DE PISTE

## TÉLÉPHONE

 RÉPONDRE /  
RACCROCHER

VOLUME




L'ICÔNE TECTECTEC ! RÉPONDRA À VOTRE APPEL GRÂCE AU MICRO INTÉGRÉ DANS L'ENCEINTE TEAM8.

- **UN APPUI SIMPLE** - RÉPONDRE / RACCROCHER
- - / + POUR CONTRÔLER LE VOLUME

LA SONNERIE DES APPELS TÉLÉPHONIQUES A ÉTÉ VOLONTAIREMENT DÉSACTIVÉE SUR L'ENCEINTE AFIN DE NE PAS ÊTRE DÉRANGÉ PENDANT UNE PARTIE. NÉANMOINS, LES APPELS PROVENANT D'AUTRES APPLICATIONS (WHATSAPP, MESSENGER, SIGNAL...) NE PEUVENT PAS ÊTRE DÉSACTIVÉS PAR NOTRE ENCEINTE. VOUS POUVEZ CONSULTER NOS TUTORIELS AFIN DE CONFIGURER VOTRE TÉLÉPHONE POUR QU'IL NE SONNE PAS.

## RECHARGEMENT

**PRISE CHARGEUR  
USB-C**

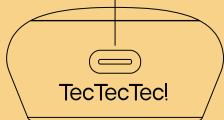

LE **TEAM8** EST LIVRÉ AVEC UN CABLE USB VERS USB-C. CE CABLE SE BRANCHE AU-DESSUS DU LOGO TECTECTEC !

UNE CHARGE PERMET DE RÉALISER ENTRE 1 ET 2 PARCOURS EN FONCTION DE L'UTILISATION DE L'ENCEINTE (MUSIQUE ACTIVE OU NON). ASSUREZ-VOUS D'AVOIR BIEN CHARGÉ VOTRE TÉLÉPHONE AVANT DE FAIRE VOTRE PARCOURS.

LA GÉOLOCALISATION CONSOMME BEAUCOUP D'ÉNERGIE.

## FAQ

LE **TEAM8** REQUIÈRE UNE CONNEXION PERMANENTE À VOTRE TÉLÉPHONE POUR FONCTIONNER, VOTRE TÉLÉPHONE DOIT AUSSI AVOIR ACCÈS À INTERNET POUR ACCÉDER AUX DONNÉES DU PARCOURS.

**-COMMENT ÉTEINDRE L'ÉQUIPEMENT ?** APPUYEZ SUR LE LOGO TECTECTEC ! PENDANT 10 SECONDES. SI VOUS N'APPUYEZ PAS ASSEZ LONGTEMPS, L'APPAREIL PASSERA EN RECHERCHE DE BLUETOOTH ET NE S'ÉTEINDRA PAS.

**-DOIS-JE APPAIRER L'APPAREIL À CHAQUE FOIS ?** NON, L'APPLICATION RECONNAÎTRA L'APPAREIL ET SE RECONNECTERA AUTOMATIQUÉMENT.

**-LE BOUTON DRAPEAU FONCTIONNE MAIS LE SON SORT DU TÉLÉPHONE, QUE DOIS-JE FAIRE ?** OUVREZ LES PARAMÈTRES BLUETOOTH DE VOTRE TÉLÉPHONE ET APPUYEZ SUR TEAM8 POUR FORCER SON APPAIRAGE.

**-BATTERIE FAIBLE :** LORSQUE LA BATTERIE EST FAIBLE, L'ENCEINTE ÉMETTRA UN SON RÉGULIÈREMENT.